

NV11 MANUAL SET INTRODUCTION

INTELLIGENCE IN VALIDATION

Innovative Technology assume no responsibility for errors, omissions, or damages resulting from the use of information contained within this manual.

MANUAL AMENDMENTS

Document Base Details

Spec. Used	Issue Date	Receipt Date	Comments
GA963-1	09/09/10	29/07/11	
GA138	01/11/10	22/01/11	
GA959	29/03/11	29/07/11	

Amendment Details

Rev.	Date	Amendment Details	Issued by
--	19/04/12	First Issue	EAM



NV11 MANUAL SET - INTRODUCTION

COPYRIGHT	3
LIMITED WARRANTY	3
PRODUCT SAFETY INFORMATION	3
INTRODUCTION	4
FEATURES	5
TYPICAL APPLICATIONS	5
STRUCTURE OF THIS MANUAL SET	6
WHICH SECTION IS RELEVANT TO ME?	6

MAIN HEADQUARTERS

Innovative Technology Ltd
 Derker Street – Oldham – England - OL1 4EQ
 Tel: +44 161 626 9999 Fax: +44 161 620 2090
 E-mail: support@innovative-technology.co.uk
 Web site: www.innovative-technology.co.uk



AUSTRALIA

support@innovative-technology.com.au

BRAZIL

suporte@bellis-technology.com.br

CHINA

support@innovative-technology.co.uk

GERMANY

supportDE@innovative-technology.eu

ITALY

supportIT@innovative-technology.eu

SPAIN

supportES@innovative-technology.eu

UNITED KINGDOM

support@innovative-technology.co.uk

REST OF THE WORLD

support@innovative-technology.co.uk



COPYRIGHT

This manual set is Copyright © Innovative Technology Ltd. 2014. No part of this publication may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from Innovative Technology Ltd. The contents of this manual set may be subject to change without prior notice.

LIMITED WARRANTY

Innovative Technology Ltd warrants each of its hardware products to be free from defects in workmanship and materials under normal use and service for a period commencing on the date of purchase from Innovative Technology Ltd or its Authorized Reseller, and extending for the length of time stipulated by Innovative Technology Ltd.

A list of Innovative Technology Ltd offices can be found in every section of this manual set. If the product proves defective within the applicable warranty period, Innovative Technology Ltd will repair or replace the product. Innovative Technology Ltd shall have the sole discretion whether to repair or replace, and any replacement product supplied may be new or reconditioned.


The foregoing warranties and remedies are exclusive and are in lieu of all other warranties, expressed or implied, either in fact or by operation of law, statutory or otherwise, including warranties of merchantability and fitness for a particular purpose.

Innovative Technology Ltd shall not be liable under this warranty if it's testing and examination disclose that the alleged defect in the product does not exist or was caused by the customer's or any third person's misuse, neglect, improper installation or testing, unauthorized attempts to repair, or any other cause beyond the range of the intended use. In no event will Innovative Technology Ltd be liable for any damages, including loss of profits, cost of cover or other incidental, consequential or indirect damages arising out the installation, maintenance, use, performance, failure or interruption of a Innovative Technology Ltd product, however caused.

PRODUCT SAFETY INFORMATION

Throughout this manual set, we may draw your attention to key safety points that you should be aware of when using or maintaining the product.

These safety points will be highlighted in a box, like this:

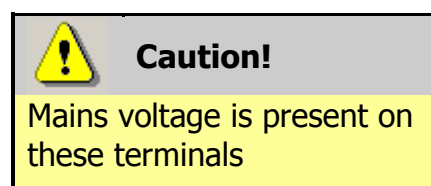


This manual set and the information it contains is only applicable to the model stated on the front cover, and must not be used with any other make or model.



INTRODUCTION

The NV11 validator is made up of four basic components: an NV9USB validator head, Note Float module, removable bezel and a cashbox (as shown below):

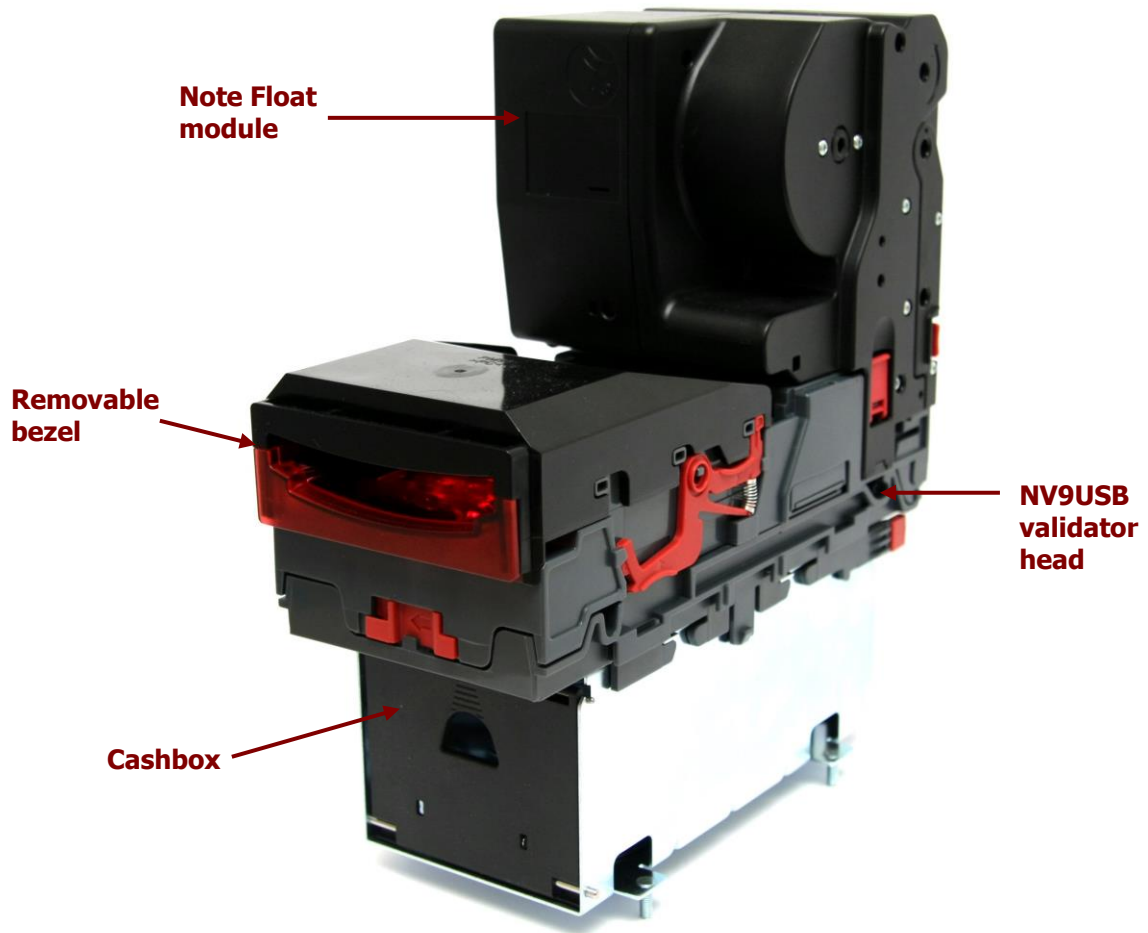

The NV11 is a device that can accept, validate and store 300 or 600 bank notes of mixed denominations, and also has the capability of storing a further 30 notes in the Note Float module for future payout.



Up to 16 different denominations of bank note can be accepted and stacked, and the Note Float module can be programmed to store and dispense 30 single denomination notes.

The NV11 validator leaves the factory preset to at least one currency and one firmware interface so that it is ready for immediate installation. The NV11 validator works with any NV9USB currency dataset created by Innovative Technology Ltd - datasets can be downloaded from the Support section of the ITL website.

FEATURES

The NV11 validator has many innovative features, including:

- 300 or 600 note storage capacity
- Note Float module has 30 note capacity (single denomination)
- Accepts, validates and stores bank notes in less than 3 seconds
- Uses a secure encrypted protocol for data transfer

TYPICAL APPLICATIONS

The NV11 validator can be used in a variety of situations where high security and high volume bank note acceptance, validation and payout are needed. Some typical applications are:

- AWP and SWP applications
- Self-Serve and Retail
- Kiosks
- Casinos
- Parking and Ticketing
- Vending

STRUCTURE OF THIS MANUAL SET

This manual set is made up of seven sections, each is supplied in a separate Portable Document Format (PDF) file, so you only need to download or print the section relevant to your requirements:

- Introduction
- Section 1 – Quick Start and Configuration Guide
- Section 2 – Field Service Manual
- Section 3 – ITL Software Support Guide
- Section 4 – Mechanical and Electrical Manual
- Section 5 – Software Implementation Guide
- Section 6 – Technical Appendices

WHICH SECTION IS RELEVANT TO ME?

- **Quick Start and Configuration Guide:**

- Most users should use this section; typical users are software engineers looking at how to make it work, project engineers evaluating their first unit, or installation engineers installing the unit into a host machine.
- This section contains the essential information that a user needs to quickly assemble and configure the NV11 validator ready for installation into the host machine.

- **Field Service Manual:**

- Typically used by a field service engineer who is maintaining the product.
- This section contains the essential information that the field service engineer needs to clean, maintain and fault find an NV11 validator that is installed in a host machine.

- **ITL Software Support Guide:**

- Any user who wants to test the functionality of the unit, reprogram the firmware or dataset, or set up the encryption key, address or routing for the unit.
- This section contains the information needed for a user to configure and program the NV11 validator, using a range of software tools.



- **Mechanical and Electrical Manual:**

- Design engineers who are designing a host machine cabinet, or looking to integrate the NV11 validator into an existing cabinet.
- This section contains the all the mechanical and electrical information a designer needs to effectively integrate the NV11 validator into a host machine.

- **Software Implementation Guide:**

- Software engineers looking at how to implement the NV11 validator in their host machine, or design engineers looking at including the unit in their host machine.
- The information in this section details the communications protocols, specific commands and interfaces used (eSSP and ccTalk).

- **Technical Appendices:**

- These appendices have no specific audience, but users can find relevant and useful information here.
- This section includes information on product approvals, technical specifications and ordering information.